



1. Connect probe and turn on gauge.

2. Place a small drop of the supplied coupling fluid on the battery cover (Probe Zero Plate) located on the top of the gauge.



3. Press the probe firmly against the cap.

4. The Stability Indicator on the LCD display should have six or seven bars illuminated and a value should be shown in the display.



5. While maintaining probe contact with the Test Plate, press the Probe Zero key. The display will show "Prb0" while the Gauge calculates its zero point.